


INSTALLATION





# Instructions

Awning Adapter PSA Mini Van  
T 3200

301918 - 301919

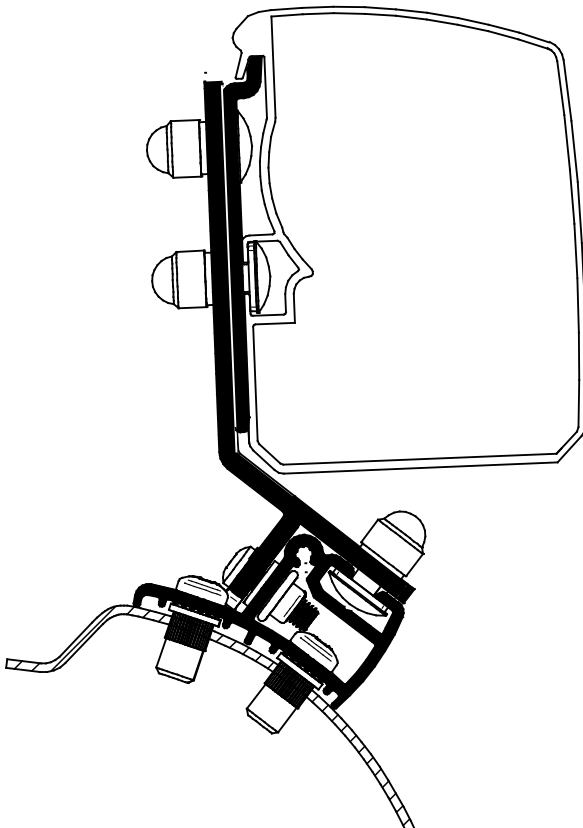

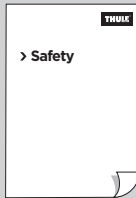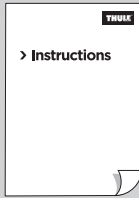

**EN****ADAPTER - INSTALLATION INSTRUCTIONS****DE**

Adapter - Bedienungsanleitung

**NL**

Adapter - Gebruikershandleiding

**FR**

Adaptateur - Instructions d'utilisation

**IT**

Adattatore - manuale utente

**ES**

Adaptador - manual de usuario

**SV**

Adapter - användarmanual

**FI**

Adapteri - käyttöohje

**DA**

Adapter - brugermanual

**NO**








Adapter - brukerhåndbok

**PL**

Adapter - instrukcja obsługi



<b>1</b>	<b>WARNINGS &amp; INFO</b> waarschuwingen & informatie / warnhinweise & informationen / avertissements et informations / avvertenze & informazioni / varningar 1 information / varoitukset & tiedot	<b>p 4</b>
<b>2</b>	<b>FITGUIDE</b> Fitting tabel / Anwendungstabelle / Table d'application / Guida di adattamento / applikationstabelle / sovellus taulukko	<b>p 5</b>
<b>3</b>	<b>CONTENT</b> inhoud / Inhalt / contenu / contenuto / innehåll / pitoisuus	<b>p 6</b>
<b>4</b>	<b>TOOLS</b> Gereedschap / Werkzeuge / des outils / strumento / verktyg / työkalu	<b>p 6</b>
<b>5</b>	<b>INSTALLATIONS</b> installaties / Installationen / installations / installazione / installationer / laitteistot	<b>p 7</b>

# 1. WARNINGS & INFO

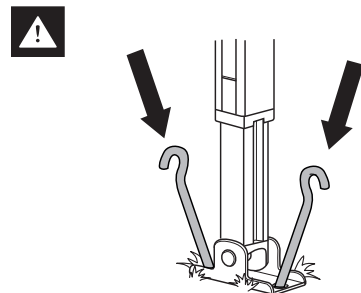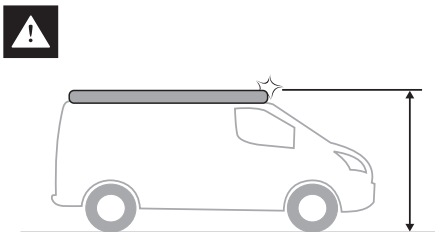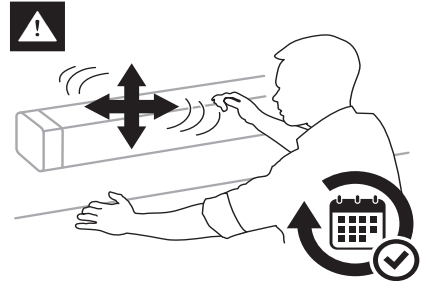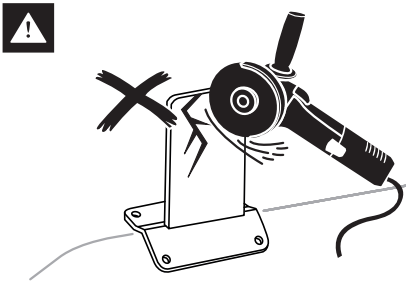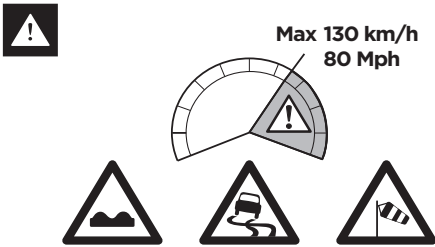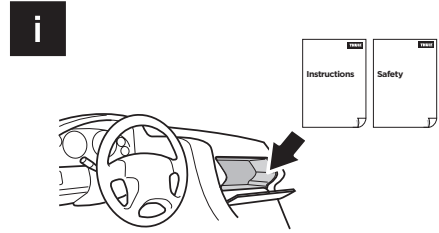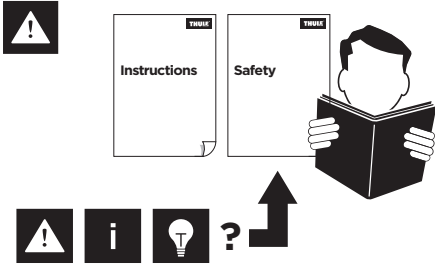

## 2. FITGUIDE

BRAND	MODEL	YEAR	ADAPTER	AWNING	
Citroën	SpaceTourer L2H1 LHD	2016 - ...	301918	T3200 - 2.70m	
Citroën	SpaceTourer L2H1 RHD		301919		
Citroën	Jumpy L2H1 LHD		301918		
Citroën	Jumpy L2H1 RHD		301919		
Peugeot	Traveller L2H1 LHD		301918		
Peugeot	Traveller L2H1 RHD		301919		
Peugeot	Expert L2H1 LHD		301918		
Peugeot	Expert L2H1 RHD		301919		
Toyota	ProAce L2H1 LHD		301918		
Toyota	ProAce L2H1 RHD		301919		
Toyota	ProAce Verso L2H1 LHD		301918		
Toyota	ProAce Verso L2H1 RHD		301919		
Opel	Vivaro C L2H1 LHD		2019 - ...		301918
Opel	Zafira Life L2H1 LHD				
Vauxhall	Vivaro C L2H1 RHD	301919			
Vauxhall	Zafira Life L2H1 RHD				

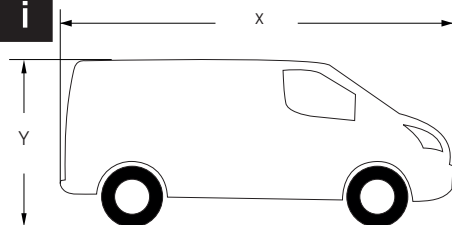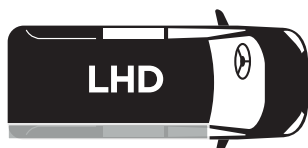

X	Y
L1	H1
L2	1900mm
L3	

### 3. CONTENT



**x8**  
M6 x18  
DIN9021  
A2



**x8**  
M6 x 9 x 24  
Blind rivet nut



**x4**  
M6  
SCHNORR  
A2



**x8**  
M6 X 20  
DIN603  
A2



**x8**  
M6  
DIN985  
A2




**x2**  
19.5 x 15 x 2.5mm  
Solo Bolt Plate



**x8**  
M6 x 16 mm  
DIN7985 TX30  
A2



**x8**  
M6



**x4**  
M6 x 20 mm  
ISO7380 TX30  
A2




**x4**  
4.2 x 16 mm  
ISO7380 TX30  
A2




**x4**  
19.5 x 15 x 1.5mm  
Solo bolt plate



**x2**  
Right



**x2**




**x2**




**x4**

**LHD** 30198

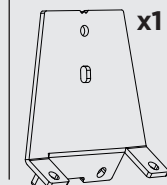


**x1**

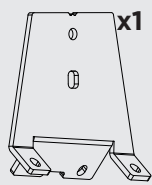


**x1**


**RHD** 30199

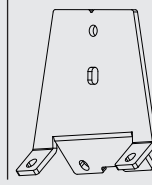

**x1**

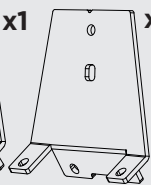


**x1**



**x2**  
Left



### 4. TOOLS

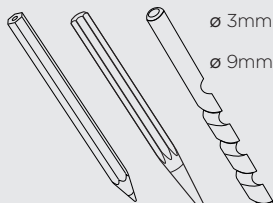

∅ 3mm  
∅ 9mm



TX20  
TX30

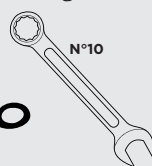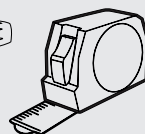


# 5. INSTALLATION

**i**


**LHD**

301918


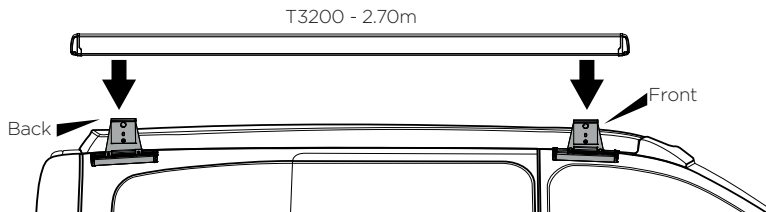


**RHD**


301919

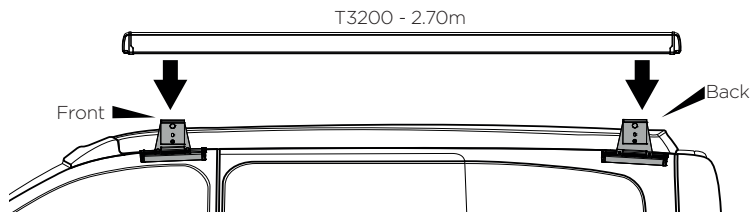


**1**

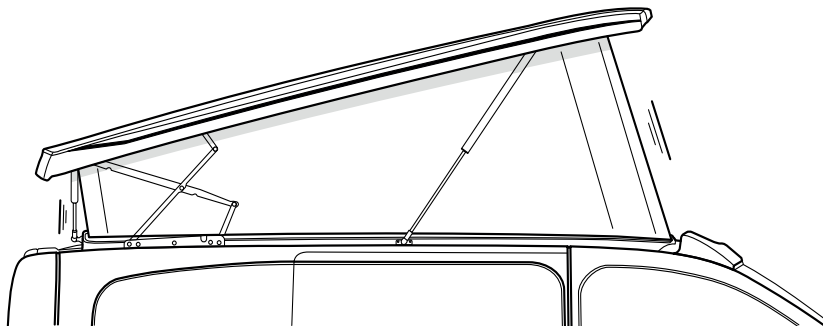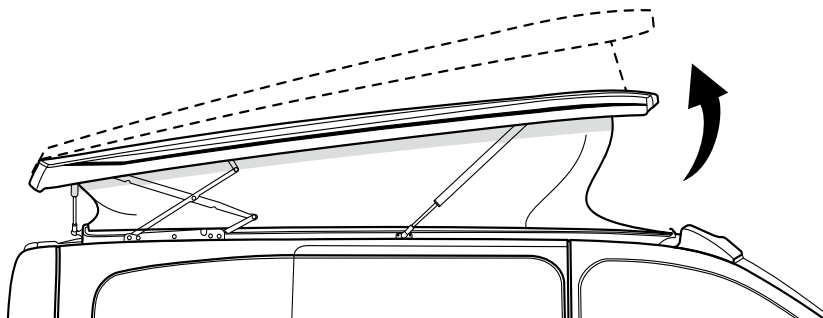



2

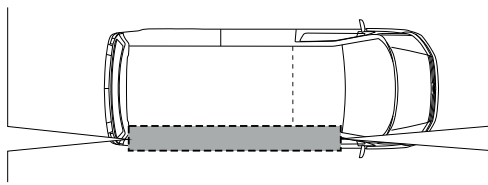




3

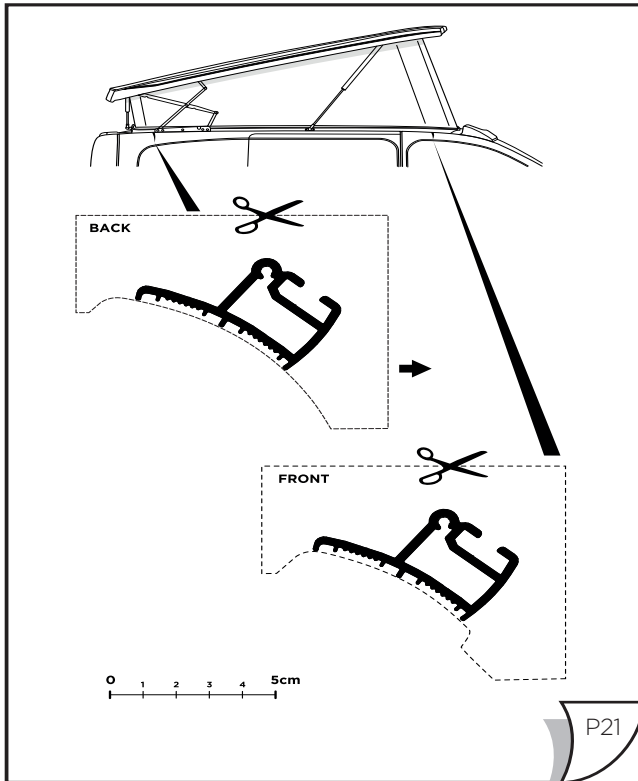















A

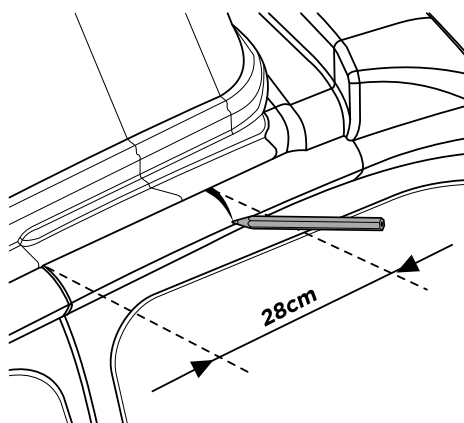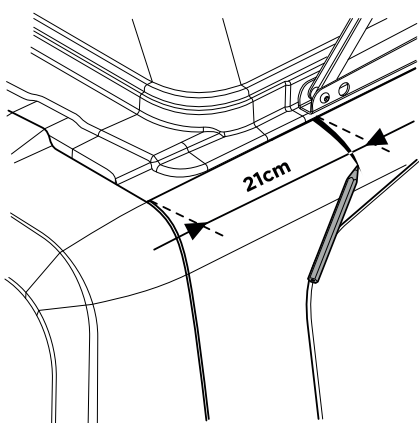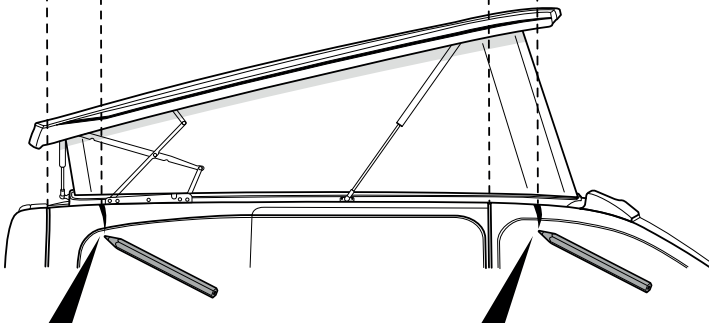


B

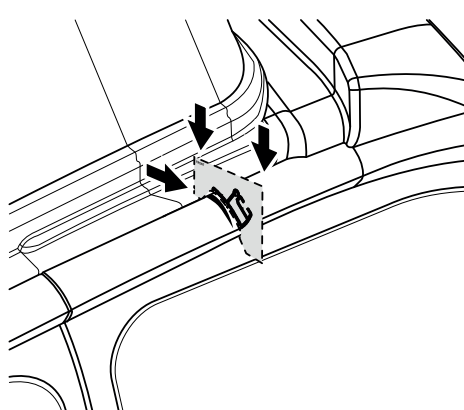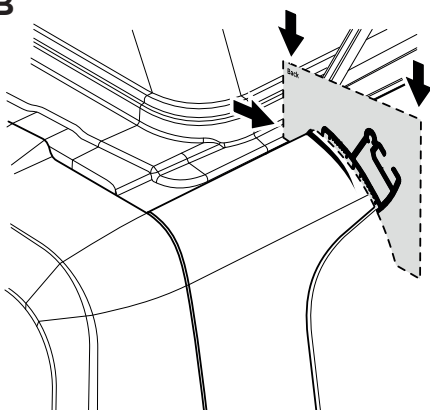


C

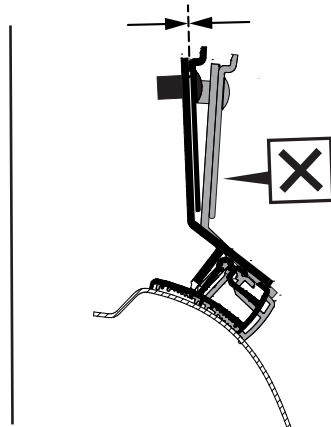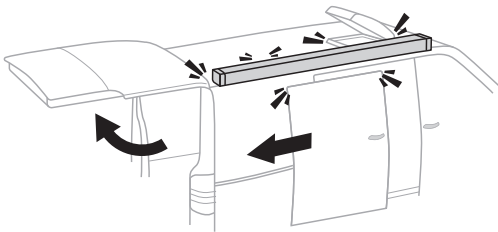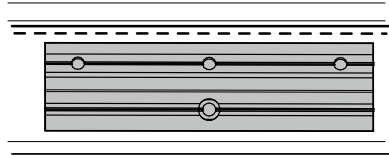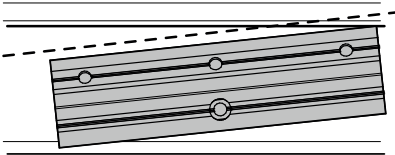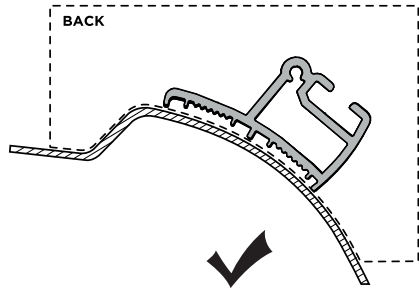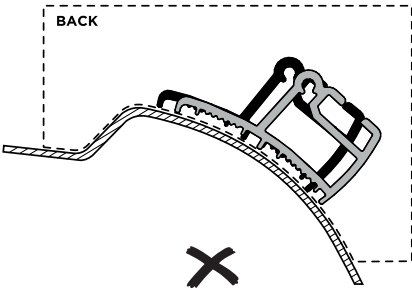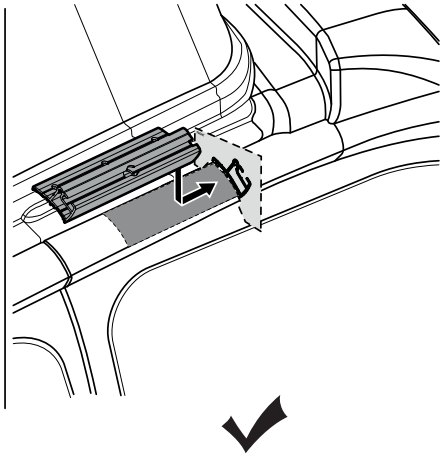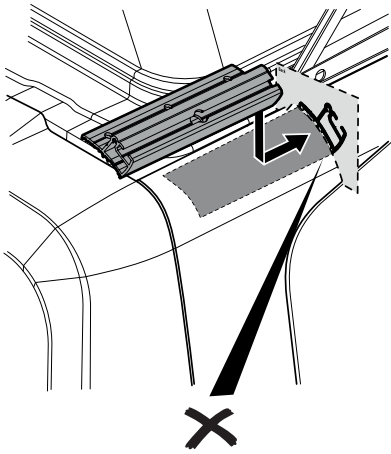



D




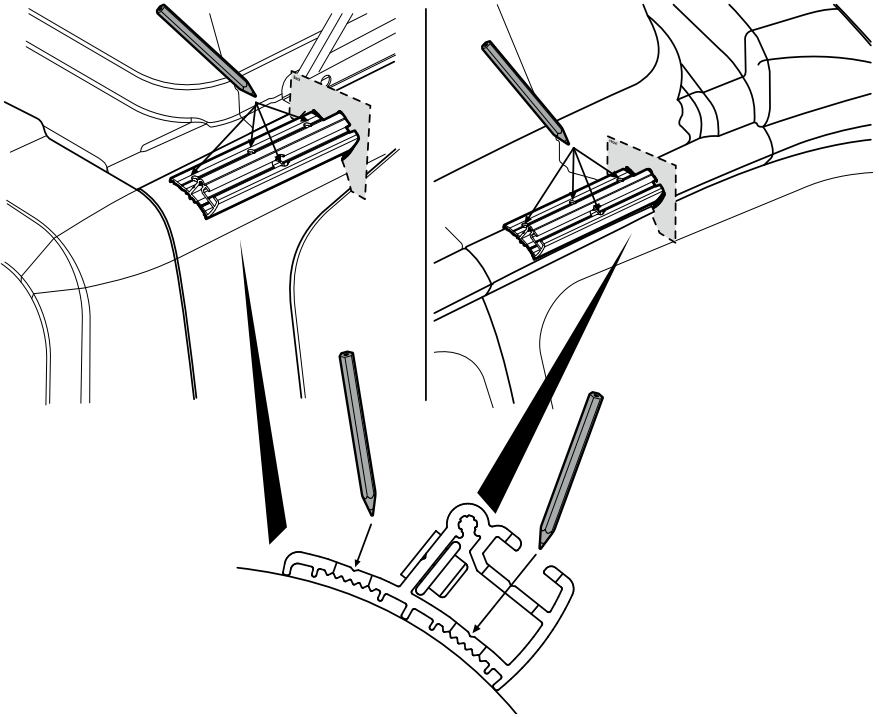



5

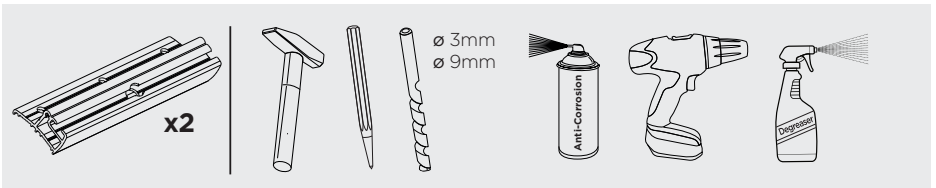


A

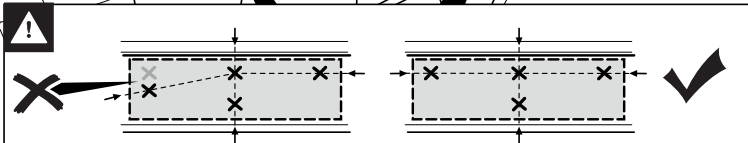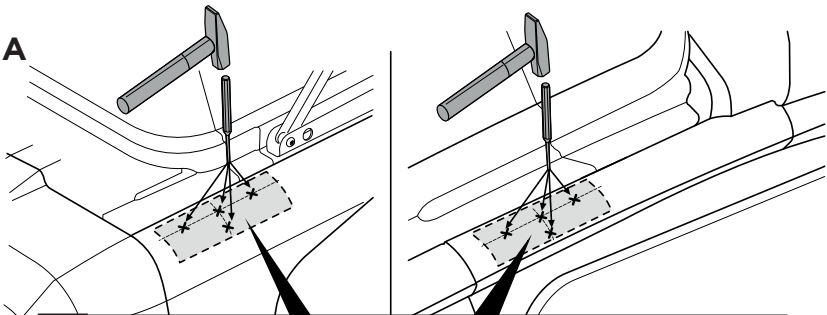

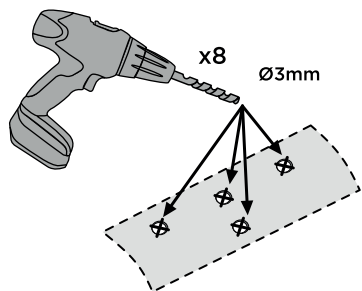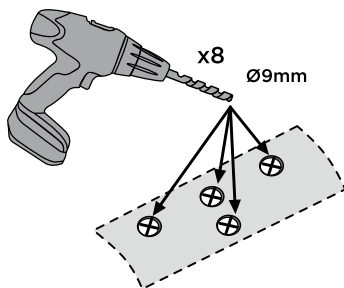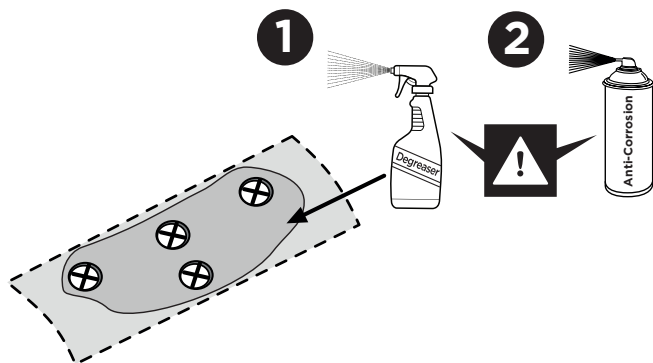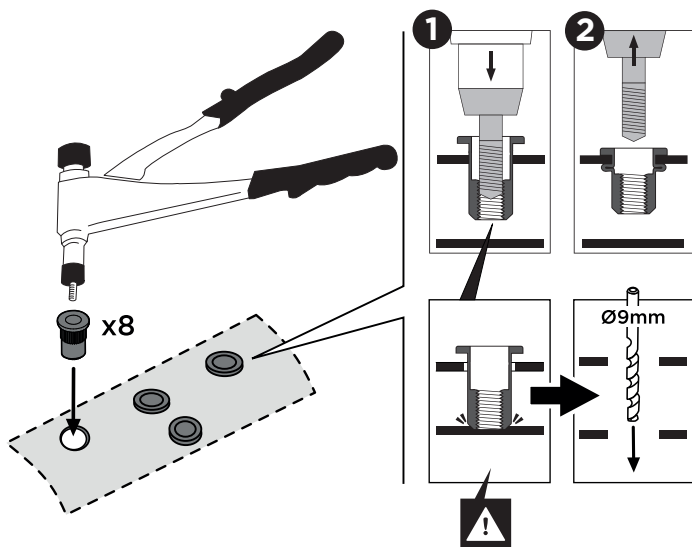
**B****C****D****6**

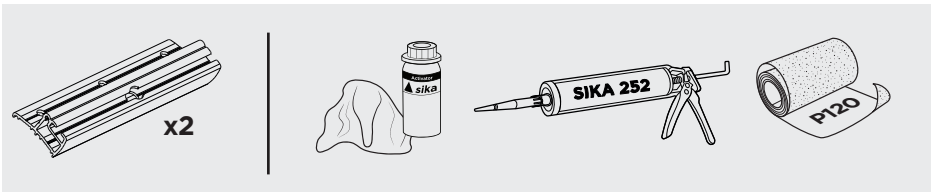

A

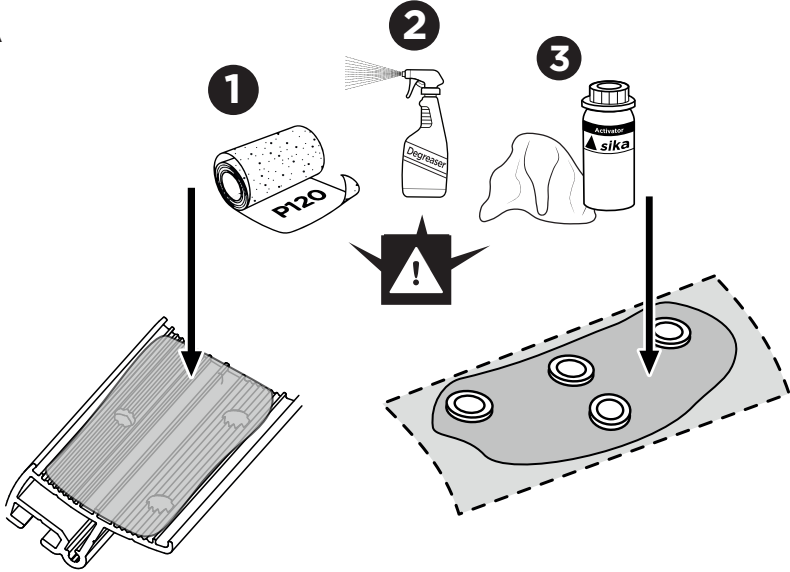


B

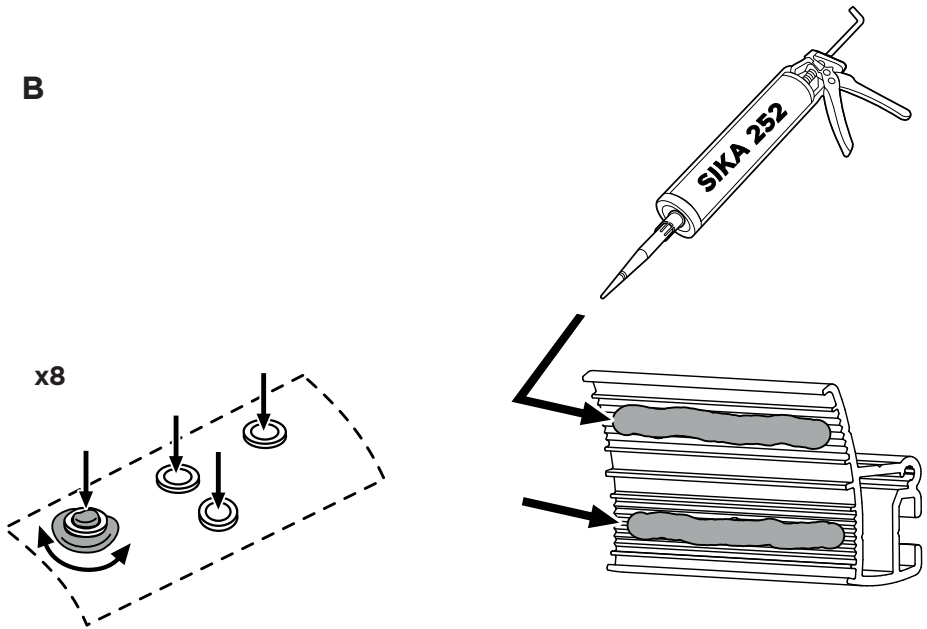


8




x2

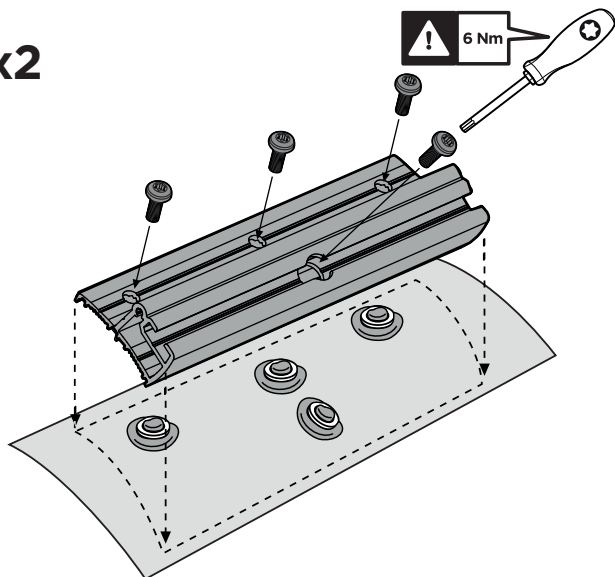



9





x2

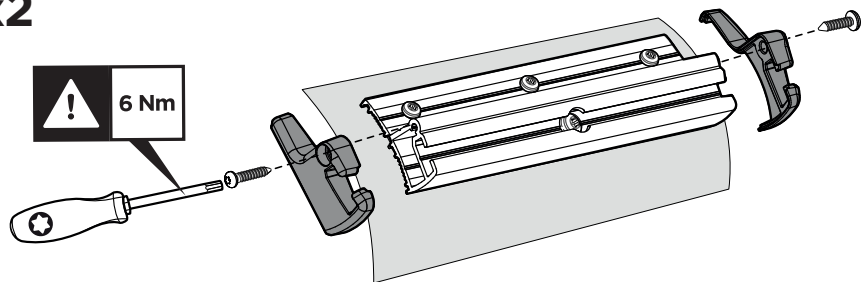


10

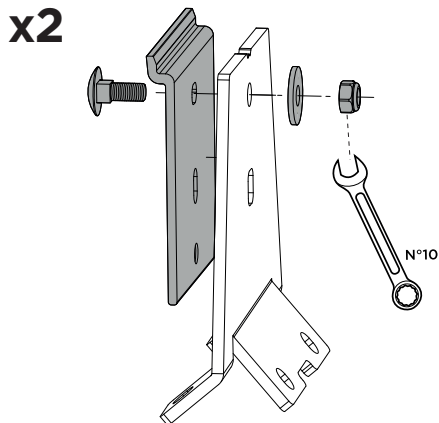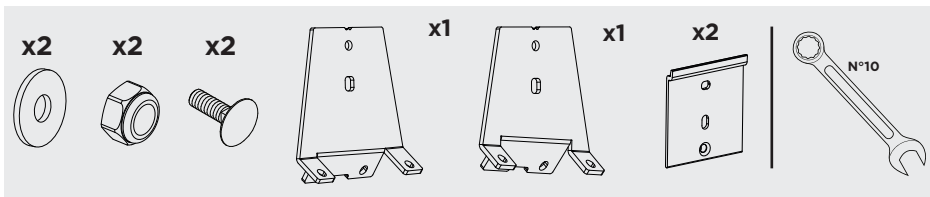


11

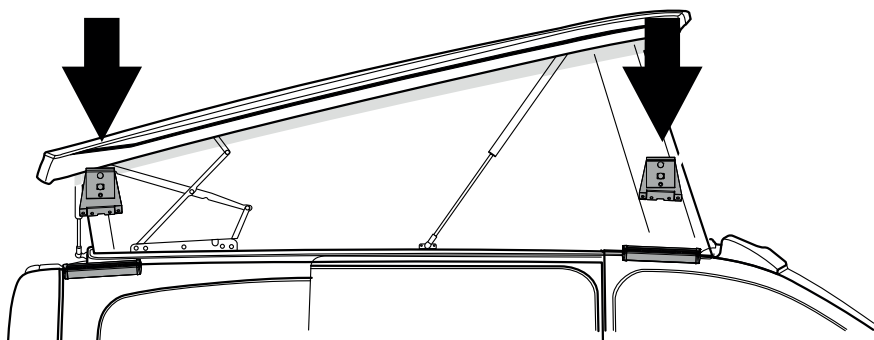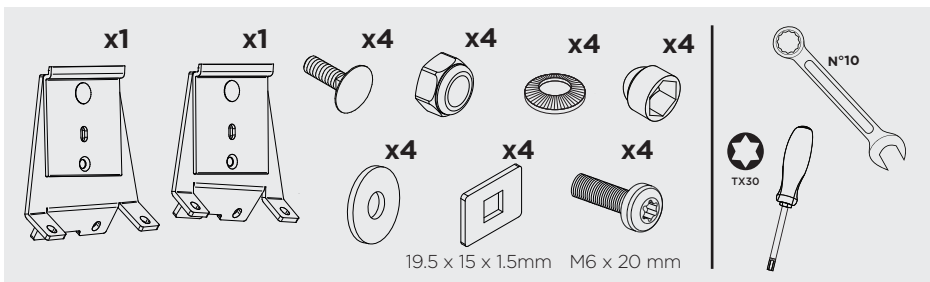

**A**

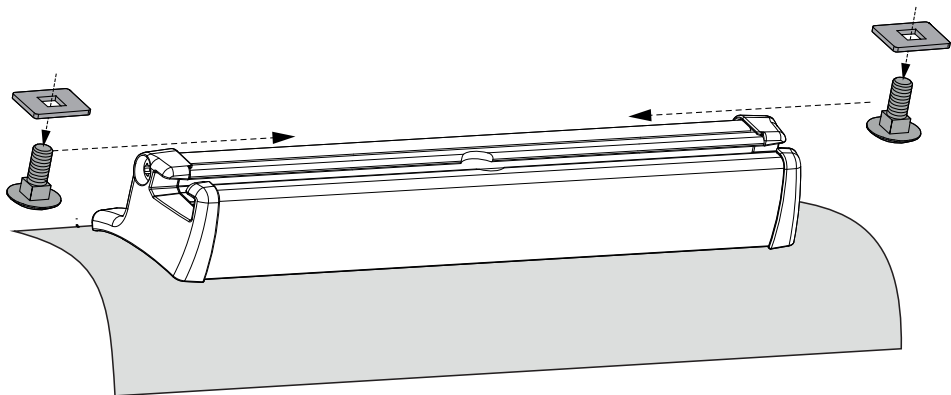


**B**


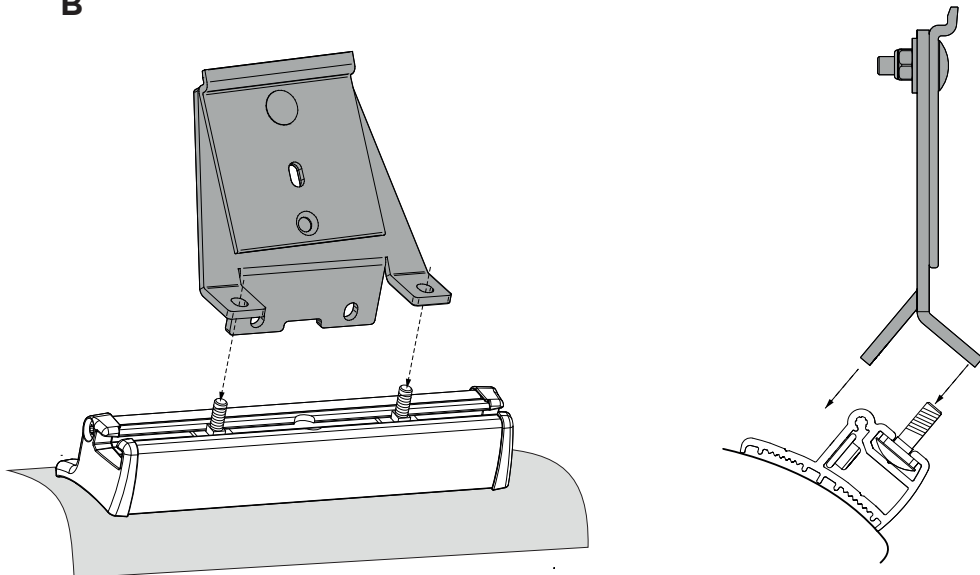





C

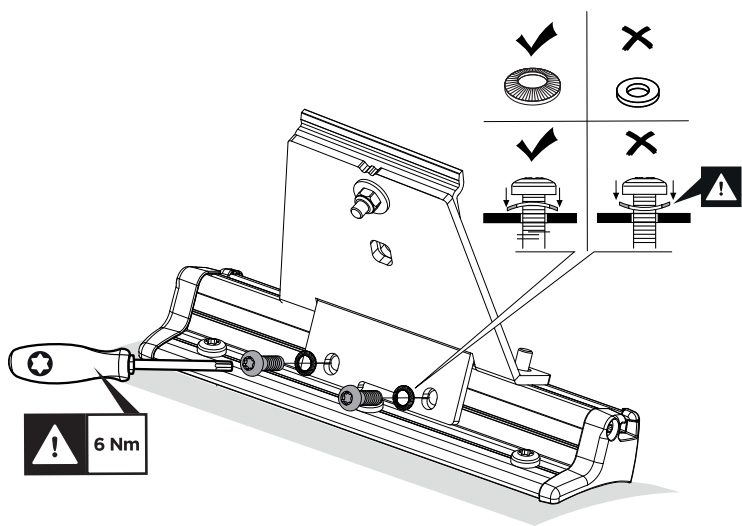



D

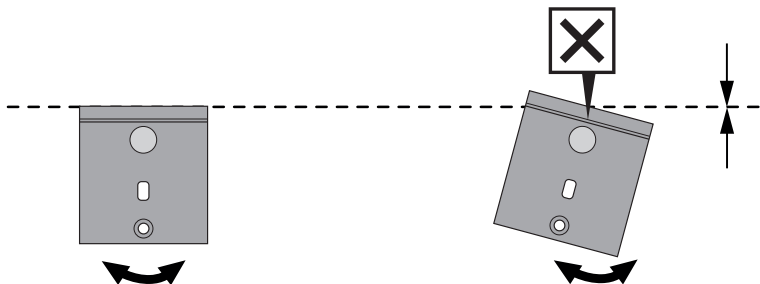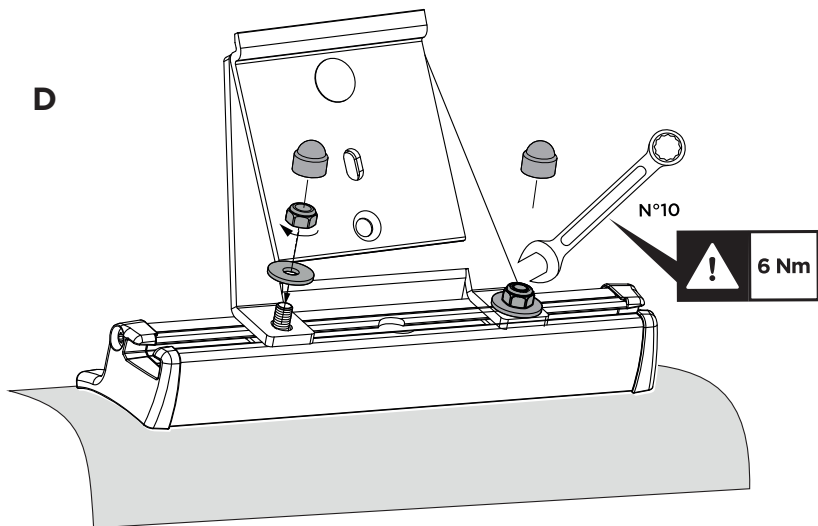



12

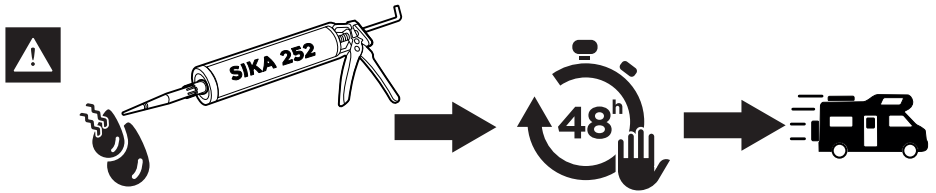



13

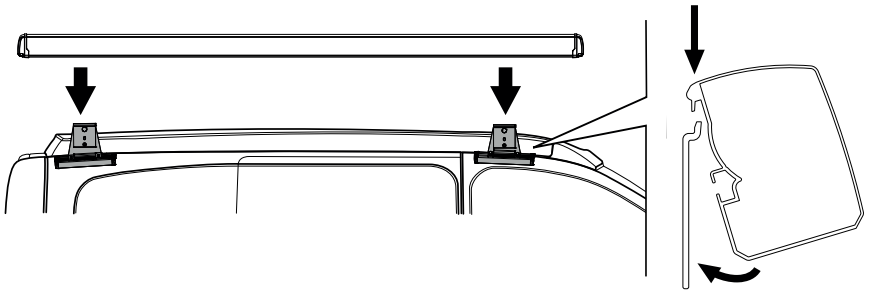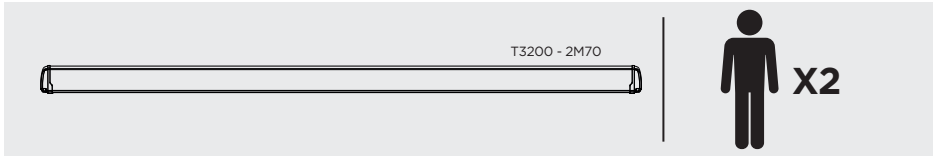

14

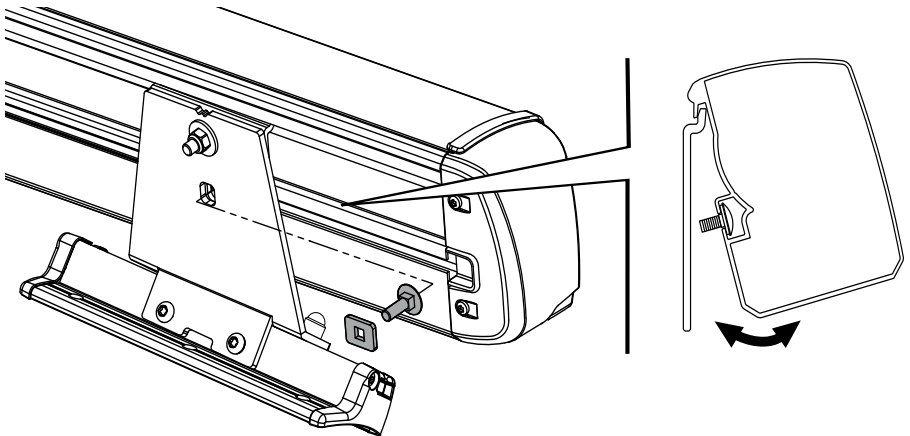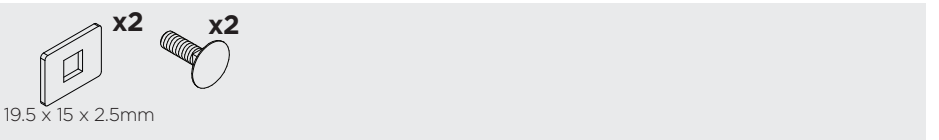

15

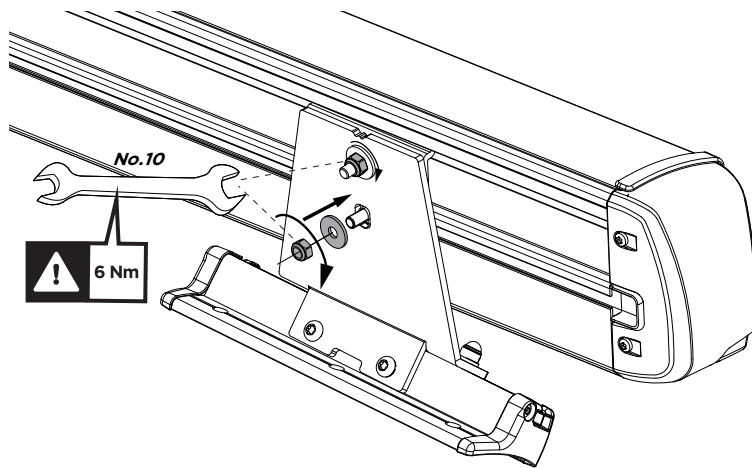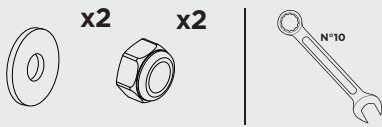

16

